



Everything you need from tents to teaspoons

## Cotton Candy Machine

### Instructions:

1. Unscrew and push down the two silver knobs on each side of the cabinet top.
2. Place the white bowl on top of the machine.
3. Attach the clear dome shield to the white bowl.
4. Turn ALL switches to the OFF position before plugging in machine.
5. With all switches off, fill cotton candy head at least 90%. The 90% level is necessary to obtain a balanced condition. **DO NOT OVERFILL!**
6. Before turning the power on, manually turn the head to balance the sugar. This will eliminate excessive vibration of the head. **NEVER ADD SUGAR WHEN THE MOTOR IS RUNNING.**
7. Turn main switch and heat switch on.
8. Turn heat control knob clockwise to maximum setting to initiate the fastest warm up.
9. The machine should start making cotton candy within a few seconds. When the unit starts making cotton candy you **MUST** reduce the heat setting. Turn the heat control knob counter-clockwise to eliminate smoking. If you operate the unit at "Start up" mode you will burn the sugar. If you smell burning sugar or see smoke reduce the heat immediately.

### Wrapping Cotton Candy:

1. Hold the pointed end of the cone.
2. Break into the web of cotton candy with the cone.
3. With a flicking action roll the cone in the web of cotton candy building up in the bowl.
4. Lift the cone up with the ring of cotton candy attached and rotate the cone to wrap the cotton candy.
5. Do not roll cotton candy while the cone is inside the bowl as this will pack the floss too tightly.

NOTE: If the cotton candy fails to stick to the cone, pass the cone near the spinner head to pick up a "starter" of melted sugar.

### Cleaning:

When completing operation for the day, run all sugar out of the floss head. When empty, turn the heat to highest position for approximately one minute to "clean" the band by backing off remaining sugar. With a damp cloth, wipe clean the white bowl and the clear shield. Tighten the two silver knobs on each side of the cabinet top before transporting.

### Additional Information:

- Cones (pack of 20) - \$3.00
- Bags (pack of 20) - \$3.00
- Sugar Mix : BLUE OR PINK (approx. 70 cones) - \$10.00

You will be charged a replacement fee for items returned dirty, broken, Damaged or lost.

**Please call us at 734.354.9591 with any concerns.**